


The pipes must be fitted with 150mm centre and have not to be lower than the surface.

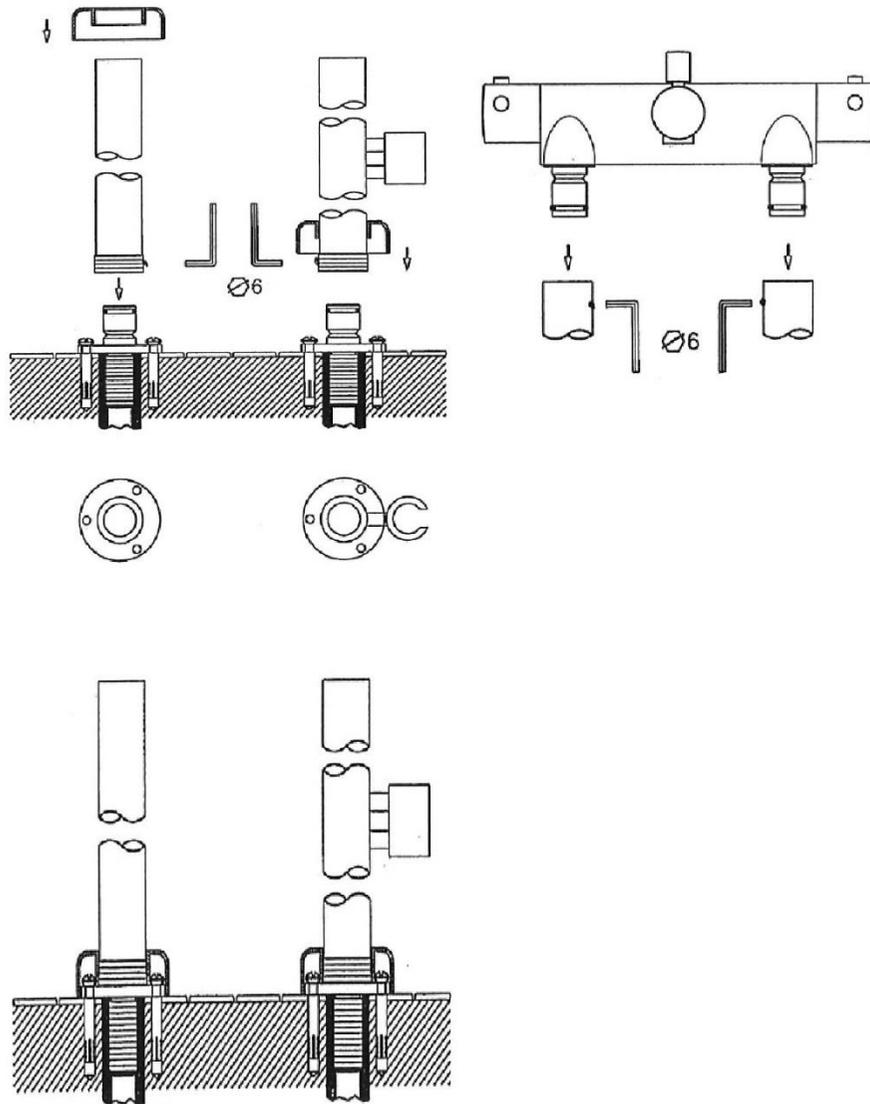

1. Fitting of the unions to the floor

- screw the unions (shorten the ½ " G thread, if necessary)
- make on the floor the position for fixing holes
- remove the union
- drill the Ø 8 holes for the expansion screws
- fit the expansion housing
- wrap the ½" G thread with Teflon tape
- screw the unions by using a 10mm hexagonal wrench and set the holes corresponding to the expansion housings fitted into the floor
- screw the 3 screws to each union

2. Fitting of the pillars (please read this instructions when looking the Bath/Shower set in front of you)

- fit the pillars into the unions (right pillar with bracket for the hand shower)
- set the pillars so that the screws are in front of each other
- screw the screws by using a 3mm Allen wrench
- screw the rosettes on floor unions till they will be tightened to the floor

3. Fitting of the mixer

- fit the body connectors on the pillars (attention: do not damage the O - rings)
- screw and tighten the screws by using a 3mm Allen wrench
- connect the flexible hose to the mixer outlet.

